



# Attention!



## Important Instructions for Warm Weather Use

! To extend working time in ambient temperatures over 100°F / 37°C add a single bag of **CERATECH Pavemend TR™ Warm Weather Additive** to the mix water.

### Warm Weather Additive Instructions:

**1** Add 1 bag of CERATECH Pavemend TR™ Warm Weather Additive To Water and Mix Thoroughly.

**2** Add \*Mix Water to Pavemend TR and Mix Per Instructions

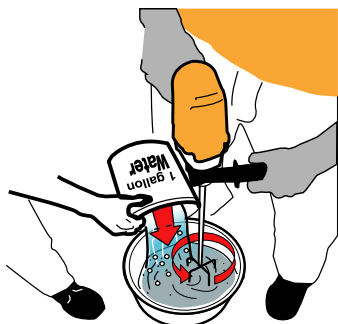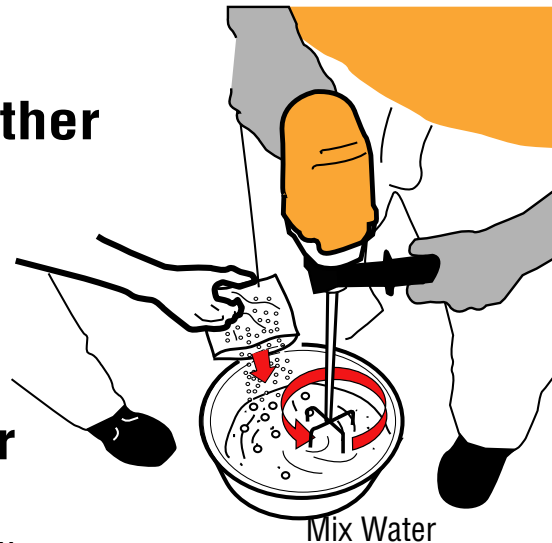

\* In Addition to Adding The Warm Weather Additive CERATECH Recommends **Increasing Mix Water By 1 Additional Pint** For A Total Water Volume of 9 Pints ( 1 Gallon + 1 Pint)

With the addition of **Warm Weather Additive**, **Working Time** should be between 12 & 17 minutes



! DO NOT MIX  FOR LESS THAN 3 MINUTES REGARDLESS OF AMBIENT TEMPERATURES

! When Utilizing Warm Weather Additive and Additional Water, Extend Loading Time 1 Hour For A Total of 4 - 5 Hours From Addition of Water. ( Wheeled Traffic)

Contact CERATECH Field Engineering Team for Additional Support  
1-888-341-2600

EMAIL: [info@ceratechinc.com](mailto:info@ceratechinc.com)

6/27/07 / lmk

